



Installation instruction of sense cable to the PAC-charger

The sense cable enables the charger to adjust the output voltage in accordance with battery voltage and temperature fluctuations.

Schematic connection of the sense cable

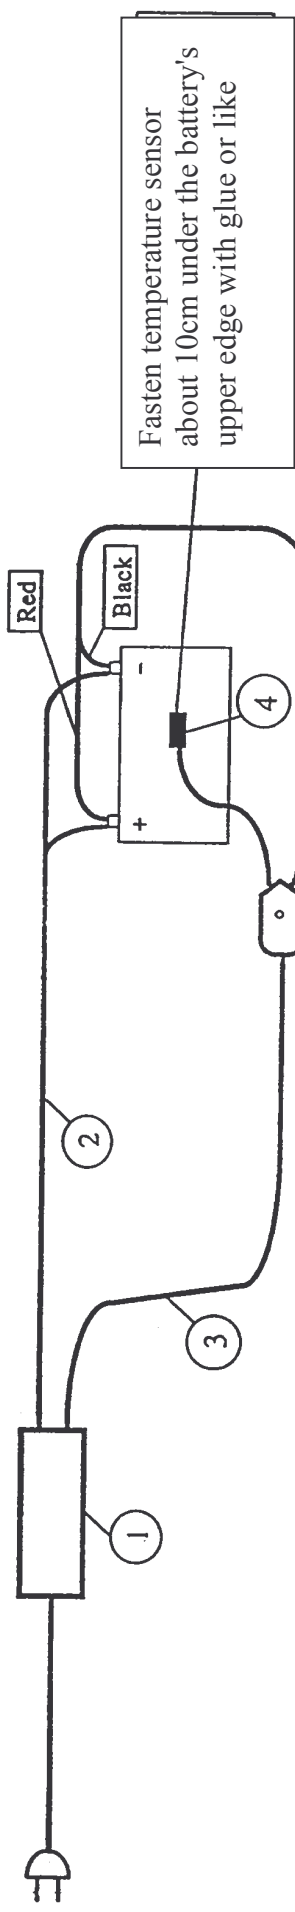

Connection of sense cable to charger

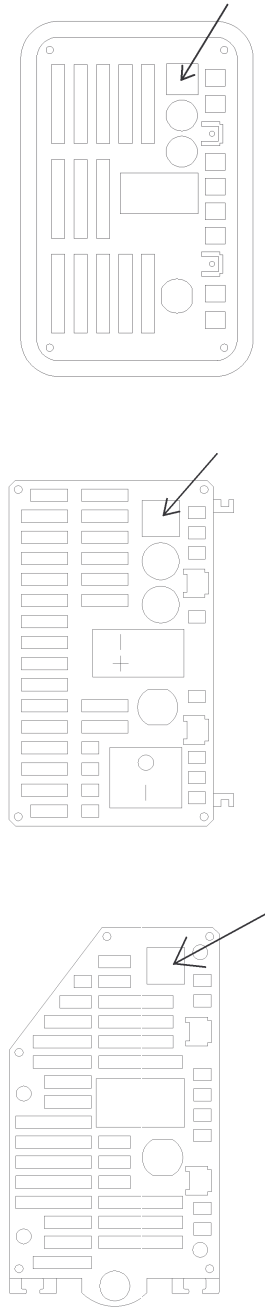

Arrow shows the place where to connect the sense cable

POS	ITEM
1	PAC charger
2	Battery cable
3	Sense cable
4	Temperature sensor